

SUSCLEAN CARTRIDGE

JMP
SERIES

JMC
SERIES

It is an all stainless steel filter using wire mesh.

● **Pressure resistance**

Filter media is a three-layer structure and is suitable for liquid filtration with excellent pressure resistance and high viscosity.

● **Chemical resistance**

Alkaline and acid type chemicals are available.

● **Heat-resistance**


Heatproof temperature : (-190°C~)+400°C

● **Reuse**

It is economical because it can be washed and reused

● **Compatibility**

It is compatible with general products(OD ϕ 50 ~ ϕ 70 mm, Height 250, 500, 750 mm), and you can upgrade the filtration equipment.

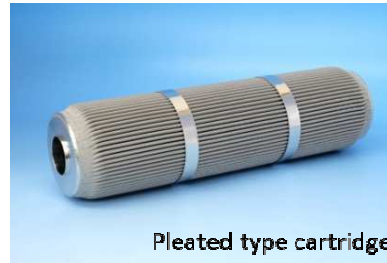

Pleated type cartridge



Cylindrical cartridge

Filter composition

media: SUS316L plate: SCS14

Other: SUS316

Filtration accuracy (Nominal)

2, 5, 7, 10, 15, 20, 25, 37, 40, 44, 74, 105, 149, 177, 238 μ

Filtration area (m²)

shape \ Length (in)	10	20	30
Pleated type	0.15	0.30	0.45
Cylindrical type	0.04	0.09	0.13

Pressure resistance

cartridge outside \Rightarrow inside 0.86 MPa

cartridge inside \Rightarrow outside 0.07 Mpa

Model


Please select a model within the frame

JM □□ - □□□ - □□□ - □
 A B C D E


A	B	C	D	E
Filter material shape	Mounting structure	Length (including gaskets)	Filtration accuracy (Nominal)	Gasket
P : Pleated type C : Cylindrical type	No mark : Flat gasket type W : 222O-ring type F : 226O-ring type	O1 : 247.5mm O2S : 495mm O3D : 739mm	002 : 2 μ 040 : 40 μ 005 : 5 μ 044 : 44 μ 007 : 7 μ 074 : 74 μ 010 : 10 μ 105 : 105 μ 015 : 15 μ 149 : 149 μ 020 : 20 μ 177 : 177 μ 025 : 25 μ 238 : 238 μ 037 : 37 μ	N : NBR T : PTFE D : Silicon V : Fluororubber E : EPDM

Mounting structure


H type (Flat gasket type)

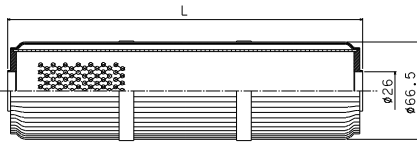



W type (222O-ring type)

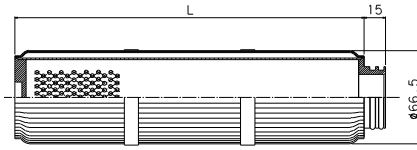

F type (226O-ring type)

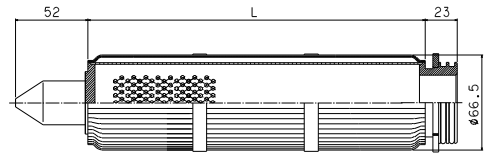

Flow characteristic

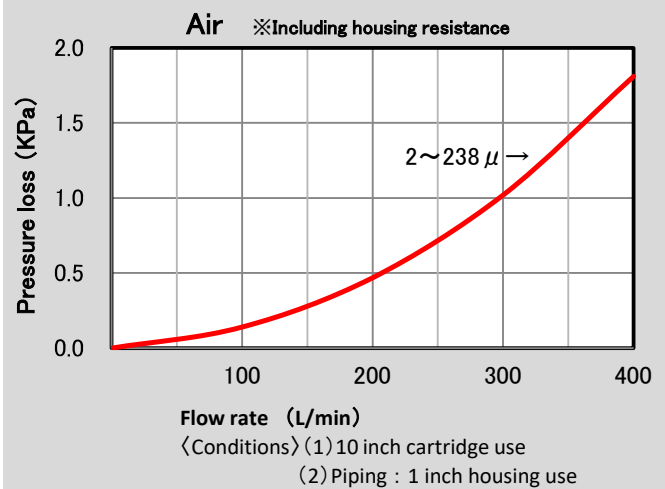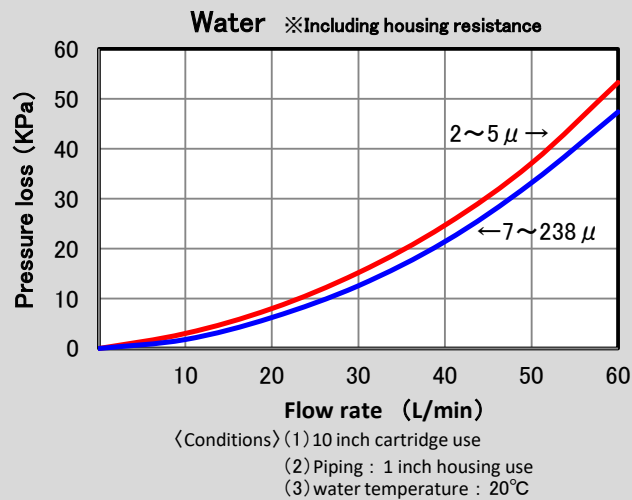

Method for cleaning and recycling cartridge

If clogging occurs and the pressure loss of the cartridge increases, please clean and regenerate in the following way.

● Backwashing

● Please first degrease

(There are methods such as solvent degreasing, alkaline degreasing, surface activated degreasing.)

● With a soft brush, carefully brush the surface to remove dirt.

● Blow compressed air from the inside of the cartridge. (Repeat above several times)

● Degrease with a clean degreasing agent.

● Use compressed air to blow water, wash thoroughly, dry and finish it.

● Chemical cleaning

● If backwashing can not be completed, wash with mixed acid and treat with nitric acid.

● Wash thoroughly with water, blow compressed air to remove moisture and dry.

● Ultrasonic cleaning

● Perform ultrasonic cleaning in the cleaning solution.

● Wash thoroughly and dry.

Depending on the type of dirt, if you combine each of the above cleaning methods, more effective cleaning can be expected.

MOSSFIL CO.,LTD

2-5-3 Toyonotyo Kasukabe City Saitama Japan

TEL. 048(736)7655 FAX.048(736)6674

<http://www.mossfil.co.jp>

E-msil:info@mossfil.co.jp